

## VI.5.3D-SYSTEM-PRINT PROGRAM FCST HCL TECHNIQUE PRINT

### Purpose

Technique PRINT sets the unit number for printer output.

The integer value for this Technique is the unit number.

Valid values are 6, 8 and 9.

The Global default value is 6.

This Technique is Universal.

### Form of Input

PRINT(integer)

where integer is 6, 8 or 9

### Example

PRINT(6)

Printer output will be printed to unit 6.